


Seismic Zone Map

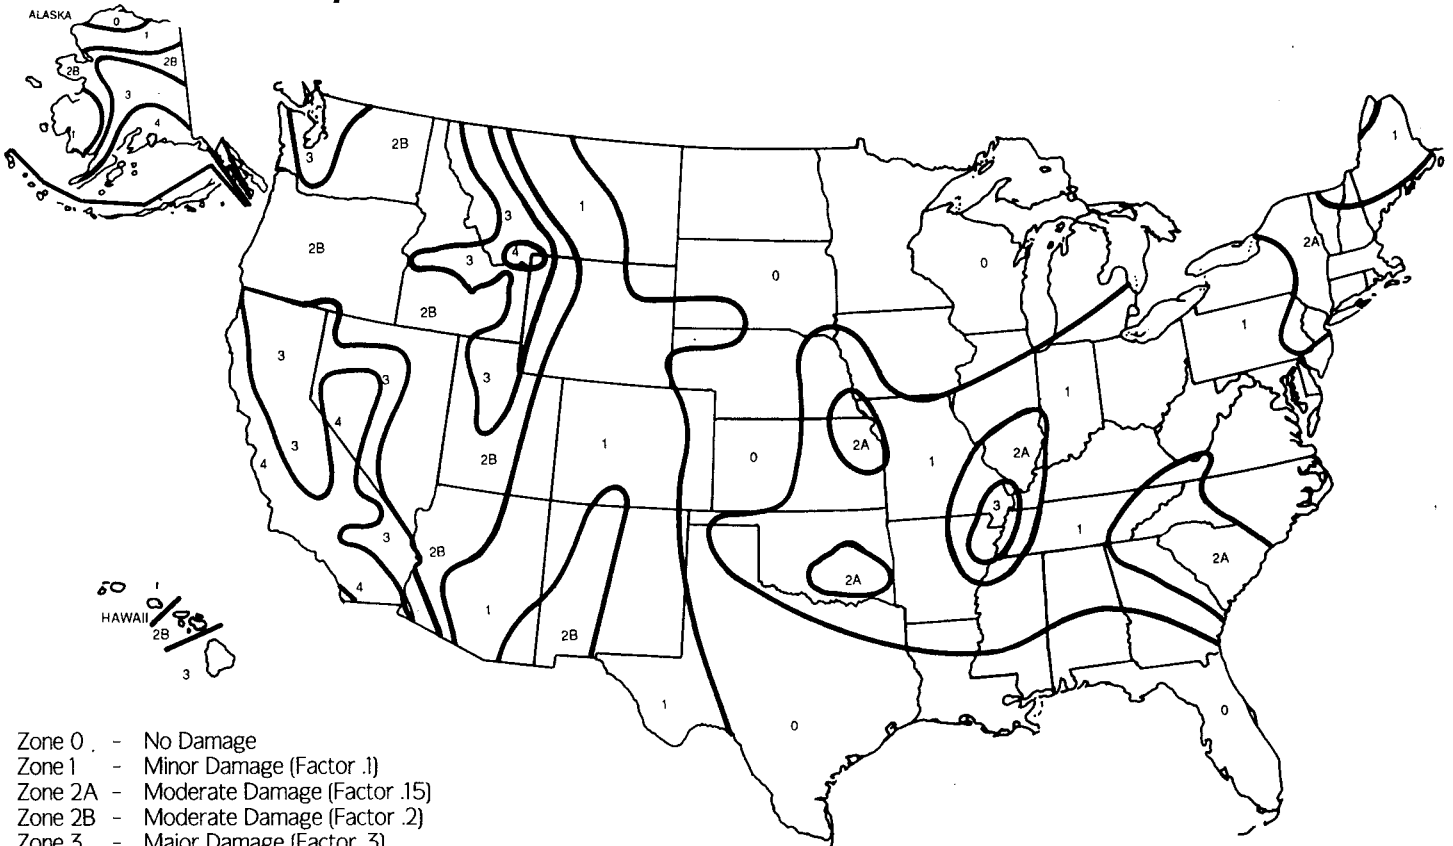

- Zone 0 - No Damage
- Zone 1 - Minor Damage (Factor .1)
- Zone 2A - Moderate Damage (Factor .15)
- Zone 2B - Moderate Damage (Factor .2)
- Zone 3 - Major Damage (Factor .3)
- Zone 4 - Those areas within Zone 3 determined by the proximity to certain major fault systems. (Factor .4)

3 / 2 5.00
 PUERTO RICO 4